



File Name: casio ctk 2000 keyboard manual.pdf

Size: 2486 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 19 May 2019, 13:17 PM

Rating: 4.6/5 from 668 votes.

Status: AVAILABLE

Last checked: 18 Minutes ago!

In order to read or download casio ctk 2000 keyboard manual ebook, you need to create a FREE account.

[**Download Now!**](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with casio ctk 2000 keyboard manual . To get started finding casio ctk 2000 keyboard manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

casio ctk 2000 keyboard manual

Precauciones de seguridad Antes de intentar usar el teclado, asegurese de leer las "Precauciones de seguridad" separadas. Safety Precautions Before trying to use the keyboard, be sure to read the separate "Safety Precautions". English Espanol. English Espanol Next Page 2 NOTICE Page 3 Contents General Guide. E2 Using Builtin Songs to E4 Master Keyboard. Page 4 General Guide Page 7 Getting Ready to Play Page 8 Playing the Digital Keyboard Page 10 Playing the Digital Keyboard Page 11 Controlling the Keyboard Sounds Reverb adds reverberation to notes. You can change the A. Page 13 Controlling the Keyboard Sounds Page 14 Controlling the Keyboard Sounds Applying Effects to a Sampled Sound. Turning off power. Page 16 Controlling the Keyboard Sounds Use the following procedure to replace. Page 17 Playing Builtin Songs With this Digital Keyboard, builtin. Page 18 Playing Builtin Songs You can turn off the. Page 21 Using Builtin Songs to Master Keyboard Play Page 22 Using Builtin Songs to Master Keyboard Play Page 23 Using Builtin Songs to Master Keyboard Play Lesson 3 Remember what you learned as Playing a Particular Song All. Page 25 Using Builtin Songs to Master Keyboard Play Use the following. Page 26 Using Builtin Songs to Master Keyboard Play Music Challenge is a game that measures your. Page 28 Music Challenge Keyboard Game With Auto Accompaniment, simply select. Page 30 Using Auto Accompaniment Page 31 Using Auto Accompaniment. With these three input modes, you finger. Page 32 Using Auto Accompaniment Page 33 Using Auto Accompaniment. Use the following procedure to configure the Digital. Page 34 Connecting External Devices You can connect the. Page 35 Connecting External Devices Page 36 Connecting External Devices Page 37 Connecting External Devices This keyboard can be connected to commercially available Page 38 Reference. Troubleshooting Included Accessories Carefully check inside all of. Page 39 Reference Notes are cut off whenever the number. Page 40 Reference. Specifications. <http://dezmaster.com/userfiles/bunker-hill-surveillance-dvr-manual.xml>

- **casio ctk 2000 keyboard review, casio keyboard ctk-2000 manual, 1.0, casio ctk 2000 keyboard review, casio keyboard ctk-2000 manual.**

Keyboard 61 standard size keys Maximum Polyphony 48 notes. Page 41 Reference. Song List Chord Chart Root Esta marca de reciclaje indica. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with Casio Ctk 5000 Manual. To get started finding Casio Ctk 5000 Manual, you are right to find our website which has a comprehensive collection of manuals listed. Our library is the biggest of these that have literally hundreds of thousands of different products represented. I get my most wanted eBook Many thanks If there is a survey it only takes 5 minutes, try any survey which works for you. GUIDA DELL'UTILIZZATORE Conservare tutto il materiale informativo per riferimenti futuri. A vver tenze sulla sicurezza Prima di provare ad usare la tastiera, accertarsi di leggere le "Precauzioni riguardanti la sicurezza" a parte. Nederland Italiano Ask your question here. Provide a clear and comprehensive description of the issue and your question. The more detail you provide for your issue and question, the easier it will be for other Casio CTK2000 owners to properly answer your question. Ask a question About the Casio CTK2000 This manual comes under the category Computer Keyboards and has been rated by 2 people with an average of a 6.6. This manual is available in the following languages English, Dutch. Do you have a question about the Casio CTK2000 or do you need help. Ask your question here Casio CTK2000 specifications Brand Dust in hard to reach places is best removed with compressed air. Manual Searcher.com ensures that you will find the manual you are looking for in no time. Our database contains more than 1 million PDF manuals from more than 10,000 brands. Every day we add the latest manuals so that you will always find the product you are looking for. Its very simple

just type the brand name and the type of product in the search bar and you can instantly view the manual of your choice online for free.

ManualSearcher.<http://globalaji.com/admin/uploads/bunk-bed-instruction-manual.xml>

com If you continue to use this site we will assume that you are happy with it. Read more Ok. Before trying to use the keyboard, be sure to read the Precauciones de seguridad Please keep all information for future reference. FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential However, there is no guarantee If this equipment does cause harmful interference to radio or Declaration of Conformity. Trade Name CASIO COMPUTER CO., LTD. Responsible party CASIO AMERICA, INC. Address 570 MT. PLEASANT AVENUE, DOVER, NEW JERSEY 07801. Telephone number 9733615400. This device complies with Part 15 of the FCC Rules, Operation is subject to the following two conditions Important! Please note the following important information before using this product. Carefully check Never let children use an AC adaptor that is This mark applies in EU countries only. Manufacturer Responsible within the European Union. CASIO EUROPE GmbH. Bornbarch 10, 22848 Norderstedt, Germany Except for your own, General Guide. E2. Using the 10key Pad bn. E4. Using the Setting Button 3. E4. Using Builtin Songs to. Master Keyboard Play. E19. Phrases. E19. Step Up Lesson Flow. E19. Selecting the Song, Phrase, and. Part You Want to Practice. E20. Lessons 1, 2, and 3. E21. Lesson Settings. E22. Using Auto Step Up Lesson. E23. Getting Ready to Play. E5. Preparing the Music Stand. E5. Power Supply. E5. Playing the Digital Keyboard. E6. Turning on Power and Playing. E6. Using Headphones. E6. Changing Keyboard Response to. Touch Pressure Touch Response Using the Metronome. E8. Music Challenge. Keyboard Game. E25. Using Auto Accompaniment. E27. Playing the Rhythm Part Only. E27. Playing All Parts. E28. Using Auto Accompaniment Effectively. E30. Using OneTouch Preset. E31. Controlling the. Keyboard Sounds. E9. Select from a variety of musical Using Reverb. E10. Using a Pedal. E10. Changing the Pitch Using the Pitch Bend Wheel to. Shift the Pitch of Notes CTK3000 Only. E11.

Sampling a Sound and Playing It Using a Sampled Sound in a Rhythm Connecting External Devices. E32. Connecting a Computer. E32. MIDI Settings. E33. Connecting to Audio Equipment. E35. Reference. E36. Troubleshooting. E36. Specifications. E38. Operating Precautions. E39. Song List. E40. Chord Chart. E41. Playing Builtin Songs. E15. Playing the Demo Songs. E15. Playing Back a Particular Song. E15. MIDI Implementation Chart. Included Accessories. Separately Available Accessories Items included as accessories are subject to change without notice. Contents. General Guide General Guide. POWER switch E6 SETTING button E4. SAMPLING button E12. METRONOME button E8. INTRO, REPEAT button E16, 17, 22, 30 English Using the 10key Pad bn Using the Setting Button 3. Use the Setting button 3 to access settings that let you Setting. Trans. Setting. Parameter Md e r n Pn o Each press of 3 cycles through the available parameters. Parameter. Number Buttons. Use the number buttons to enter numbers and values. Example To enter tone number 005, input 0 3 0 3 5. Display. See Page Trans. Acomp Vol Song Vol Touch Tune Reverb Speak Note Guid Scoring Phrase Ln Smpl Auto Keybd Ch Navi. Ch Local Acomp Out Jack Bend Rng Music stand. English. Getting Ready to Play. Using Batteries. AA size batteries. Do not use oxyride batteries or any Digital Keyboard. Power Supply. Either an AC adaptor or batteries can be used to power this. Digital Keyboard. Normally, use of AC adaptor power is Keyboard. Purchase it separately from your retailer. See Using the AC Adaptor. Use the AD5 AC adaptor when you want to power the Digital. Keyboard from a household electrical outlet. DC 9V terminal Tabs. Household power outlet The indicator shown below starts to flash to let you know Replace the batteries with new Low battery indicator Turning on Power and Playing This turns on power. Increase Using Headphones.

Using headphones cuts off output from the builtin speakers, Decrease The keyboard will revert to initial default settings the See page E1 for Auto Power Off Using Batteries Doing so creates the

riskWhile you are using batteries for power, power will turn offYou can disable Auto Power Off to ensure that power is notAuto Power Off will be disabled.Touch Response alters tone volume in accordance withThis provides you some of theChanging Touch Response Sensitivity. Use the procedure below to control how much the volume ofSelect the setting that best matches your playing style.Keyboard Instrument Sound IntensityPeople normally believe that the stronger the pressure appliedActually, however,Notes are louder when keys areKeeping this in mind as you play a keyboard musicalTouchOff oFF. Touch Response is turned off. SoundType 1 1. Normal Touch Response. Type 2 2. More sensitive Touch Response than Type 1. Your Digital Keyboard provides you with key touch that is theNote volume changesIndicator disappears when. Touch Response is turned off. Pressing fast producesPressing slowly producesDo not try to use too muchChanging Keyboard Response to. Touch PressurePlaying the Digital Keyboard. Using the Metronome. The metronome lets you play and practice along with a steadyChanging the Metronome Tempo. Use the following procedure to change the tempo of theThis starts the metronome. This pattern changes with each beat.Use y slower and t faster to change the tempoNote that you must input leading zeros, so 89 is inputChanging the Beats Per Measure. You can configure the metronome to use a bell sound for theBea tChanging the Metronome Sound Volume. The metronome volume setting is changed automatically withAccompaniment or song. The metronome volume cannot beSelect from a variety of musicalEnglish. Controlling the Keyboard SoundsThe tone of the instrument you selected will sound. Your Digital Keyboard lets you select tones for a wide varietyTo select an instrument for playingTone number.

Playing with a Piano Tone Piano SetupThis selects the grand piano tone. S t.GrPno. Tone nameThe corresponding tone number and tone name willSettings. Tone NumberOn No change. Pedal EffectAccompaniment Rhythm part only. Local Control. On. Drum Assign. OffExample To select 001, enter 0 3 0 3 1.Using Reverb. Reverb adds reverberation to notes. You can change theUsing a Pedal. A pedal can be used to change notes in various ways whilePurchase one separately from your retailer. See page E1Connecting a Pedal Unit. Connect an optional pedal unit. Reve r b. SUSTAIN jackOff oFF. Turns off reverb.The larger the number selected, the longerIndicator disappears when reverb is turned off. Selecting the Pedal EffectReve r b. JackSostenutoSustains notes that are playing when theSoftSlightly softens notes played while the pedalRhythmPressing the pedal starts and stops Auto. Accompaniment or song playback. Changing the PitchChanging the Pitch in Semitone StepsThe transpose feature lets you change the pitch, in semitoneUsing the Pitch Bend Wheel to. Shift the Pitch of NotesYou can use the pitch bend wheel to slide the pitch of notesThis technique makes itTo play with the pitch bend wheelTrans. The amount the note bends depends on how much youFine Tuning Tuning. Use the tuning feature when you need to adjust the pitchYou can use the tuning feature to adjust tuning so it exactlySpecifying the Pitch Bend Range. Use the following procedure to specify how much the pitch ofYou can specify a range from 0 to 12TuneBend RnControlling the Keyboard Sounds. Controlling the Keyboard Sounds. Sampling a Sound and Playing ItYou can use the Digital Keyboard to sample a sound from aFor example, you could sampleThe samplingSampling a Sound and Playing ItKeyboard.This enters record standby. Flashes. Connection. Connect a external device. Keyboard AUDIO IN jack. CD player, Cassette player,Wa i t i ngStereo mini plug.

The Digital Keyboard will start sampling automatically,What you sample is stored as tone number 401. FlashesThe connecting cords should haveSamp l i ngLights. Or iApplying Effects to a Sampled Sound. Turning off power will cause any sampled sound data on theYou can apply various effects to the sample sound stored atPressing Middle C C4 will play back the original sound. TheTone numbers 402 to 411 actually represent effectsSelecting a tone will playEffect. NameLoops the sampled sound.Loops the sample sound and raises theLoops the sample sound and lowers theChanges the pitch from low to high, at aChanges pitch from high to low, at aChanges pitch from high to low, at aAlternates volume between high and low. This enables manual sampling. When this setting isAdds

vibrato and changes pitch by a. Alternates between high pitch and low. Adds vibrato and changes pitch from low. Starting a Sampling Operation Manually. Smp l A u t o Sampling will not. Turning off power clears sampled data! Using a Sampled Sound in a. Rhythm Drum Assign. Use the following procedure to replace a percussive Lights. D r m A s i The display will return to the previous screen if you do not Off oFF. Sampled sound does not sound. Type 1 dr1. Replaces the bass drum and snare drum of Type 2 dr2. Replaces more of the percussive The rhythm sounds in accordance with the drum assign With this Digital Keyboard, builtin tune data is referred to as English. Playing Builtin Songs Playing Back a Particular Song. Use the procedure below to play back one of the builtin Playing the Demo Songs. Lights. Song number. Use the following procedure to play back builtin songs 001 to This will start playback of the demo songs. Demo Flashes. Tune name Keyboard's console. Tw i n k l e. Tune name This will cause demo playback to jump to the song whose Demo playback continues until you stop it by pressing bk. This starts playback of the song. Sustain pedal. Key. Note. Mo o n l i Tempo. Measure Beat. This skips song playback forward to the next measure.

Each press of 8 skips ahead one measure. Holding Fingering. Measure number Song playback will continue repeat until you press bk to Pause, Skip Forward, Skip Back. Use the operations in this section to perform pause, skip This pauses song playback. This skips song playback back to the previous measure. Each press of 7 skips back one measure. Holding down Repeating Playback of Specific Measures. You can use the procedure in this section to repeat particular Start. End. These measures are repeated. This specifies the measure as the start measure. Tw i n k l e This specifies the measure as the end measure and starts Lights. Tw i n k l e Changing the song number clears the start measure and Adjusting the Song Volume. Use the following procedure to adjust the balance between SonVo l Playing with the Tone as Song Playback. Changing Playback Speed Tempo. You can use the following procedure to change the speed The procedure below lets you select the same keyboard tone Use y slower and t faster to change the tempo The tempo value will stop Playing Builtin Songs. Turning Off the Part of One Hand for Practice You can turn off the right hand part or the left hand part of a Each press of bl cycles through the settings shown Right hand part off. Left hand part off. Both hand parts off. Both hand parts on This starts playback in accordance with the setting you To master a song, it is best to break it up into shorter parts Phrases. The builtin songs are predivided into phrases to help you Song start. Phrase 1. Song end. Phrase 2. Phrase 3 Phrase. Using Builtin Songs to Master Keyboard Play Step Up Lesson Flow. Step Up Lesson takes you through practice of the right hand Phrase 1 Messages that Appear during Lessons. The following are the messages that appear on the display Message Appears when you select a phrase, when a Appears when the lesson starts with an intro Play toll advance Next Phrs. Appears when advancing automatically to the From Top. This message appears during Auto Step Up.

Lesson page E23 immediately before Complete. Appears at the end of Auto Step Up Lesson Phrase number Each press of bl cycles through the settings Right hand practice. Part You Want to Practice. Left hand practice. First, select the song, phrase, and part you want to practice. Both hand practice The same tone used for song playback will be assigned to Now it is time to start the lessons. First, select the song and Lesson 1 Listen to the song. During this lesson, the display shows the key you need to First, listen to the example a few times to familiarize yourself This starts example play. Lights Practice playing with the Lesson 2 Watch how the song is played. Play the song on the keyboard. During this lesson, the display Voice fingering guide Don't worry if you play the Song playback will wait for you to play the correct note. This starts Lesson 2. Lights Bravo! You pass! Advance to the next lesson. Again! Go back and try again. Lights Lessons 1, 2, and 3. Using Builtin Songs to Master Keyboard Play. Lesson 3 Remember what you learned as Though song playback stands by waiting for you to press the Remember everything you have learned up to Lesson 2 as Playing a Particular Song All the Way. Through. After you successfully complete all of the phrases in Lessons Try playing with both hands and find out how the Digital. Keyboard evaluates your effort. This starts Lesson 3. Lesson Settings You can turn off phrase repeat for Lessons 1, 2, and 3. This

disables phrase repeat play. Disappears. LightsTw i n k l e. Turning Off Voice Fingering Guide. Use the following procedure to turn off voice fingering guide,Lesson 2 and Lesson 3.SpeakLesson 2.Indicator disappearsUsing Builtin Songs to Master Keyboard Play. Turning Off Note GuideWith Auto Step Up Lesson, the Digital Keyboard advancesNo t eGu i d. Listen to the first phrase in Lesson 1.FlashesLights. Turning Off Performance Evaluation. Use the following procedure to turn off performanceSco r i nLesson using 7, 8, and br to ck.E23.

These features cannot be turned off during lessons.Indicator disappearsLesson Play without Dividing Songs into. Phrases. When the phrase function is turned off, lessons go through anPh r aseLnUsing Auto Step Up Lesson. Use the following procedure to turn off note guide, whichUsing Builtin Songs to Master Keyboard Play. Lesson 1Lesson 1Lesson 1Lesson 1Music Challenge Keyboard GameMusic Challenge is a game that measures your reactionThis causes a key on the onscreen keyboard to start toThis causes the onscreen keyboard key to go out to letThe next onscreen keyboard key starts to flash, so get ready to pressTimeFingering. Number of remaining notes. Displayed during a game.After a short while, the playing time display changes toTo clear the evaluation result fromScore. T i me 1 9. 2. Playing time. GradeEvaluation ResultWith Auto Accompaniment, simply select an accompanimentStarting and Stopping the Rhythm Part OnlyRhythm numberYou can have only the rhythm part play, or you can have allPlaying the Rhythm Part Only. The rhythm part is the foundation each Auto Accompaniment. Your Digital Keyboard comes with a variety of builtin rhythms,Use the following procedure toEnglish. Using Auto Accompaniment. Funk 8B t. Rhythm pattern nameThis starts the rhythm. This pattern changes with each beat.Playing All PartsAuto Accompaniment with Chords. Playing a chord with your left hand automatically adds bassThis enables chord input on the accompanimentAccompaniment keyboardSelecting a Chord Input Mode. You can select from among the following five chord inputChord input mode. Cho r dThis will cause bass and harmony Auto AccompanimentChordsMelodyUsing Auto Accompaniment. With these three input modes, you finger 3note or 4noteNote that with someAccompaniment keyboardWith CASIO CHORD, you can useAccompaniment keyboard. CASIO CHORD Fingering. Chord Type. Example. Major Chords. Letters above the accompanimentC C Major. Minor Chords. To play a minor chord, press theCm C Minor. Seventh Chords.

To play a seventh chord, press theC7 C Seventh. Minor Seventh Chords. To play a minor seventh chord,Cm7With this mode, you can use the full rangeUsing Auto Accompaniment. Effectively. Auto Accompaniment Pattern Variations. Use the following procedures to play intro and endingAuto Accompaniment patterns. Each Auto Accompaniment pattern has a basic "normalUse the procedure below to play a fillin pattern during aThis plays the fillin for the normal pattern.Lights. This starts the variation pattern. LightsLightsThis plays the fillin for the variation pattern.Lights. Use the following procedure to play an intro of a fewThis starts the intro pattern. Normal pattern play will startLights. Use the following procedure to play an ending of a fewAccompaniment play automatically. LightsUse the following procedure to configure the Digital KeyboardThis enters accompaniment start standby. Adjusting the Accompaniment Volume.